

Installation Using Shutter Spikes


For use on any surface including: wood, aluminum, vinyl, stucco, hardboard, brick, or masonry.

Required for Installation:

- Electric drill, 1/4" drill bit, hammer, and Shutter™ Spikes

Step 1

Place the shutter next to the window and mark desired location against the wall or window. See Figure 1 at right.

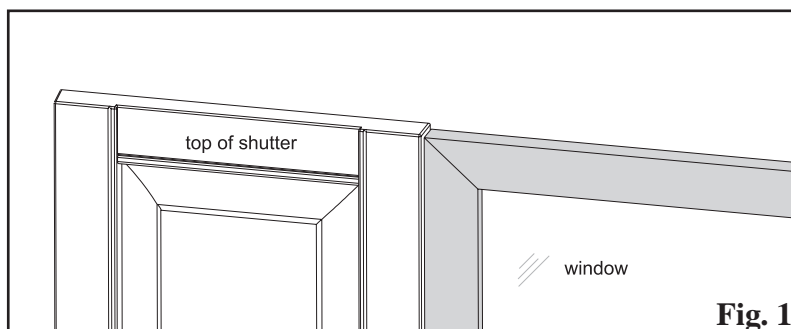

Step 2

For smaller sizes, use four shutter spikes per shutter. For large sizes 55" and over, use six shutter spikes per shutter.

Step 3


To help ensure proper alignment mark or pre-drill holes using a 1/4" drill bit into the shutter before attaching it to the wall.

Step 4

With the shutter in location against the wall, drill through the shutter into the wall surface 2 3/4" deep. Make sure you drill holes deep enough so the shutter spike doesn't bottom out.

Step 5

Grasp the shutter spike supporting shank and push it through the shutter hole and into the wall surface. Tap the shutter spike gently with a hammer to snug the shutter against the siding. Do not over tighten, or this will cause the shutter to dimple.

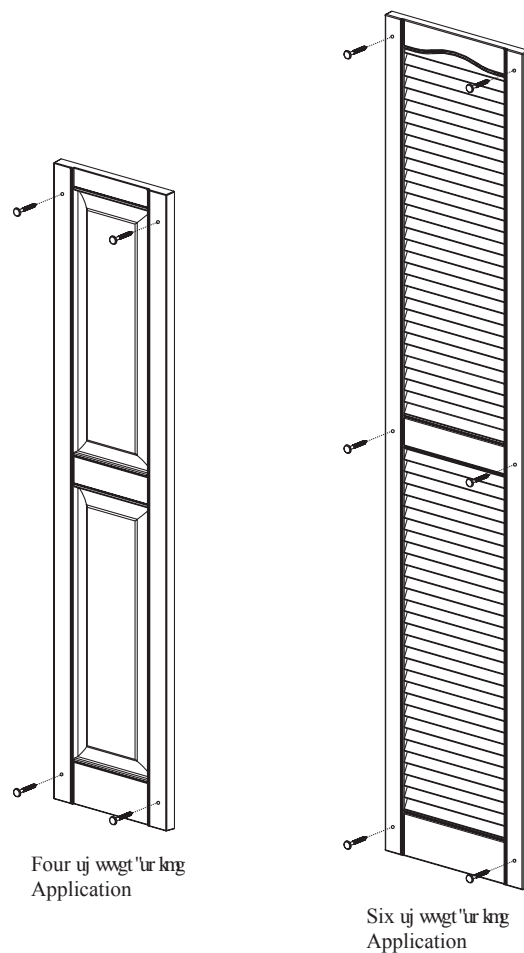

Note:

To remove shutters do not attempt to pull out the shutter spike. Simply use a pair of snips and slide them behind the shutter to cut the shutter spike off at the shank.