


# Shutter Arch Top

## Installation Instructions

For Raised Panel and Louvered Shutters

### Step 1

Attach the Arch Top to the shutter by using the clips provided. Align the shutter and the Arch Top on a flat surface. Join them together by pushing each clip on as far as it will go. Use 2 clips per Arch Top. See Figure 1 at right for clip placement.

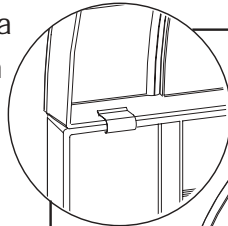

### Step 2

Fasten the shutter to the wall using the instructions supplied with the shutter.

### Step 3

Fastening the arch top to the wall is just like fastening the shutter. With the shutter in location against the wall, drill through the Arch Top and wall a total of 3 1/4" with a 1/4" drill bit. See Figure 2 at right for proper Shutter Lok location.

### Step 4

Grasp the Shutter-Lok by supporting the shank, and push it through the shutter hole and into the wall surface. Tap the Shutter Lok gently with a hammer to snug the shutter against the siding. Do not over tighten, or this will cause the shutter to dimple.

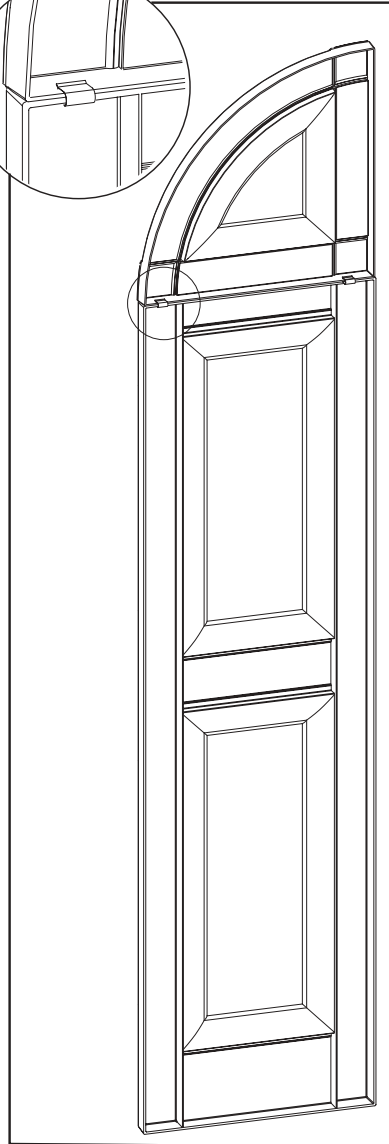


Fig. 1 (back of assembly)

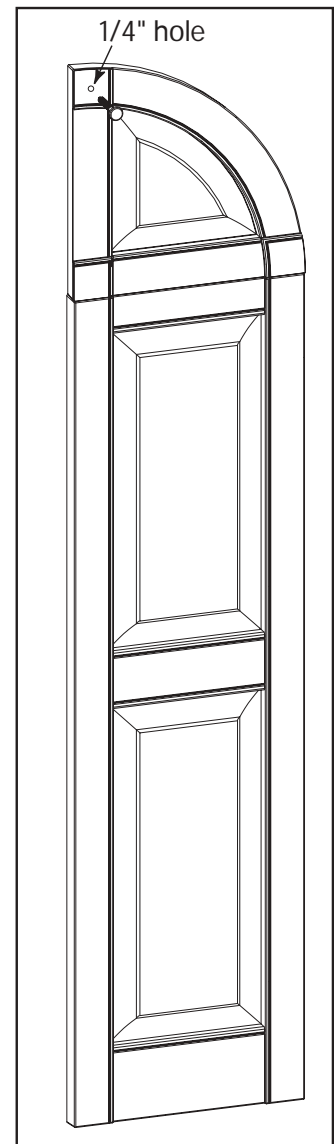


Fig. 2 (front of assembly)

10-15-01  
MIPC  
I-0075