


**Legends Direct**  
**BOARD AND BATTEN OPENED AND CLOSED INSTALLATION**  
**USING PAINTED HEAD SCREWS**  
**For Siding Made of: Wood, Vinyl or Aluminum**

1. Lay shutter face up on a clean, flat surface, preferably a piece of plywood.
2. Drill a 1/4" inch diameter hole through the horizontal rail in the center and 1 3/4" inches from the edge. Repeat on all horizontal rails. **See Drawing on Back of This Page**  
Open Board n Batten: Mark and drill at all vertical boards  
Closed Board n Batten: Mark and drill only at the two outside vertical boards
3. Position the shutter on the house next to the window.
4. Using a suitable marker, mark the mounting hole locations on the building.
5. Remove the shutter and, where marked, drill a 1/4" inch diameter hole through the Wood, Vinyl or Aluminum siding.
  - Do not drill into the wall
6. If the wall is Wood
  - Drill a 1/8" inch diameter hole 1 3/4" inches deep into the wall
7. If the wall is Masonry or Brick
  - For Masonry or Brick, you need a screw anchor. The type of anchor you purchase will determine the diameter of the hole. Follow the anchor manufacturer's instructions for installation.
8. Place shutter back on the house and fasten it to the wall using the painted head screws provided. Be careful not to over tighten the painted head screws or the shutter may become distorted.
  - We suggest using a hand screw driver rather than a power drill.
9. Repeat this process for all remaining shutter panels.  
Note: The mounting screws (3 1/4" inches) should go through the shutters and into the building. If mounting the shutters on a brick building you must use masonry anchors. These can be purchased from any local hardware store. Follow the anchor manufacturer's instructions for installation.

These instructions are intended to assist you in installing your shutters on a relatively smooth surface.

**For The Warranty to Be In Force**


The shutter must be mounted with screws in the positions specified in the illustrations. The screws must go into the wall.

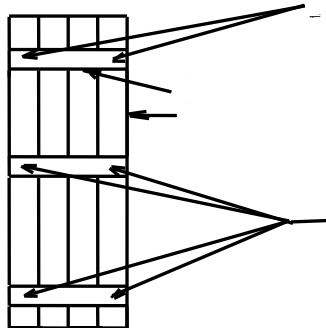

Closed BNB Drill Holes  
Long Screws

Center and bottom mounting  
holes. Use 3 1/4" screws in these  
locations.

**Note: All mounting screws must go into the building.**

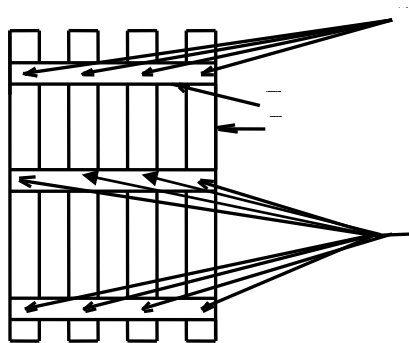

Open BNB Drill Holes  
Long Screws

Center and bottom mounting  
holes. Use 3 1/4" screws in these  
locations.

**Note: All mounting screws must go into the building.**

## **PAINTING**

These shutters are Not Paintable, unless Paintable is ordered.  
Painting other than Paintable will void the warranty.

## **CLEANING**

Shutters can easily be cleaned using mild dish soap and water, to maintain their luster.

## **TOOLS REQUIRED**

- Electric Drill
- Phillips Head Screwdriver
- 1/4" Drill Bit
- 1/8" Drill Bit

**For questions call 888-790-7743**